


Attaching the Tray:

Safari Tilt, EZ Rider & Rodeo

_

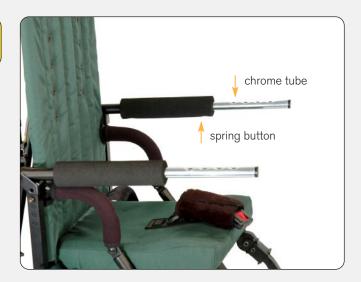

Depress the spring button on the underside of each armrest until the chrome tube inside the armrest "pops" out. Pull each chrome tube out until locked in the extended position.

2

Hold tray in both hands and squeeze black handles.



3



While squeezing the black handles, slide tray onto the chrome tubes. Release black handles to lock in the desired position.