






MILFORD ASSESSMENT FORM

Customer Details

Height: _____ Weight: _____ Age: _____ Disability: _____

Sling Types & Size (Specialty Slings cost extra)

<p>Standard</p>  <p>XS S M L XL</p>	<p>Double Amputee</p>  <p>S M L (Upcharge)</p>	<p>Net/Mesh</p>  <p>S M L (Upcharge)</p>	<p>Fleece Lined</p>  <p>M L (Upcharge)</p>	<p>Head-Supported</p>  <p>S M L (Upcharge)</p>
--	---	---	---	---

Sling Size Guide

		HEIGHT															
height in ft.		3ft	3ft 3in	3ft 6in	3ft 9in	4ft	4ft 3in	4ft 6in	4ft 9in	5ft	5ft 3in	5ft 6in	5ft 9in	6ft	6ft 3in	6ft 6in	6ft 9in
weight in lbs.		X SMALL			SMALL				MEDIUM				LARGE			X LARGE	
56																	
63																	
70																	
77																	
84																	
91																	
98																	
105																	
112																	
119																	
126																	
133																	
140																	
147																	
154																	
161																	
168																	
175																	
182																	
189																	
196																	
203																	
210																	
217																	
224																	
231																	
238																	
245																	
252																	
259																	
266																	
273																	
280																	
287																	
294																	
301																	
308																	
315																	
322																	


*Max weight capacity is 330lbs

MILFORD ASSESSMENT FORM

Vehicle Details

Make: _____ Model: _____ Year: _____

Installation Position:

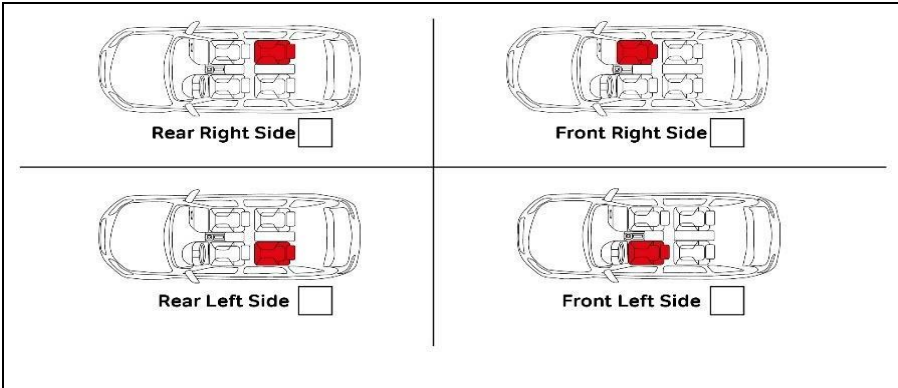

Driver Side = Front Left Side
 Passenger Side = Front Right Side
 Rear Passenger Side = Rear Right Side
 Rear Driver Side = Rear Left Side

Please provide the four measurements (**in inches**) below:

A: From the ground to the top of the sill.

B: From the ground to the depression in seat.

X: From the ground to the top of wheelchair seat.


Y: From the ground to the middle of sternum (seated)




A = _____



B = _____

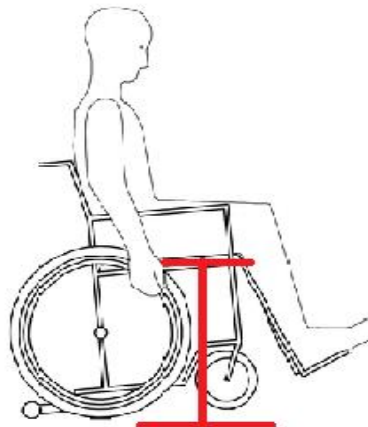

X = _____

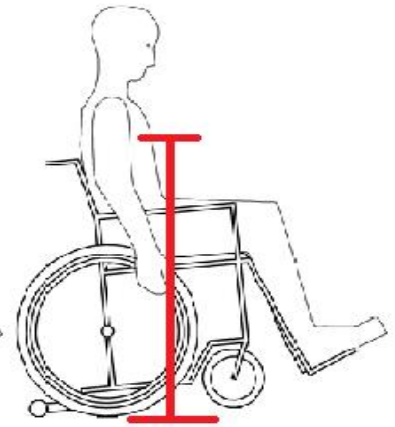

Y = _____


Sill Bracket

Sill Brackets are used on vehicles that have a very low dash or to retain the use of the glovebox. This is typically used in smaller vehicles and will need to be removed before closing the vehicle door.

Note: Using a Sill Bracket will reduce the weight capacity of the Milford by 55lbs.

Does the vehicle need a Sill Bracket?

Yes _____ No _____

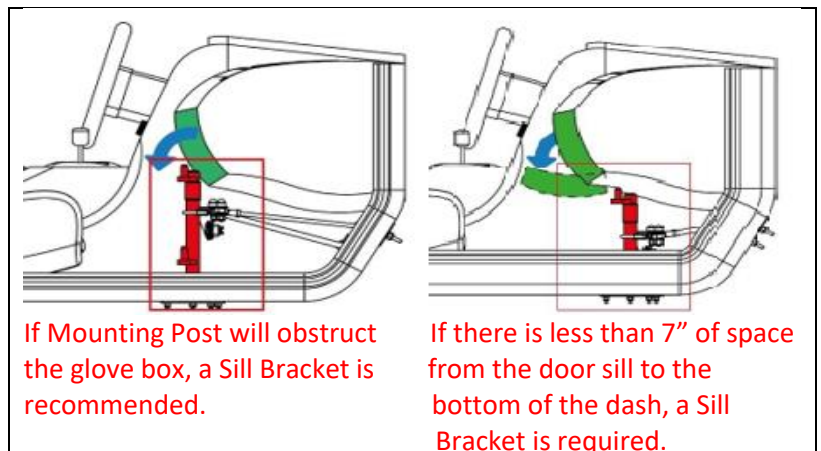

If Mounting Post will obstruct the glove box, a Sill Bracket is recommended.

If there is less than 7" of space from the door sill to the bottom of the dash, a Sill Bracket is required.

MILFORD ASSESSMENT FORM

Other Options & Accessories

Spreader Bar Cover



A Spreader Bar is included with your Milford Order

Sizes are based on height and weight; Small, Standard and Large are available. The Spreader Bar should be at chest height when lifting the client. In some cases, a protective padded cover may be appropriate for the client.

Spreader Bar Covers are additional cost, and not available for Large Spreader Bars (used with XL Slings)

Spreader Bar Cover: Yes _____ No _____

More ways to use your Milford!

The Smartbase



Make your Milford mobile with the Smartbase from Autochair! The Smartbase allows the Milford to be positioned around your home as needed for easy transfers.

- Can lift up to 330lbs
- Wheels lock for safety and stability
- Simple to assemble and operate
- Leg width can be adjusted to suit the space
- Rechargeable battery included
- Portable – Folds flat for easy storage

Add Smartbase to quote? Yes _____ No _____

Include Extra Battery (additional cost): Yes ___ No ___

Milford Wall Bracket



The Wall Bracket allows your Milford to operate from a fixed position in the home where space is tight. After securely mounting the Wall Bracket to a load-bearing wall, the Milford can help with transfers from wheelchairs to bathtubs, stairlifts to wheelchairs, and anything in between.

Wall Brackets must be mounted on a load-bearing stud wall and may require reinforcement in certain situations.

Rechargeable battery pack not included (must be ordered separately).

If you would like to include Wall Brackets with your order, please let us know by requesting a Wall Bracket Assessment Form.