

# PATHWAY<sup>®</sup> HD

Code Compliant  
Modular Access  
System



All aluminum

ADA and IBC compliant

Adjustable heights

Safe, strong, and durable

Virtually maintenance free

Can be moved or expanded

Easily configured/reconfigured

Three-year warranty

Fully engineered to provide safe, code-compliant access to a variety of temporary or permanent structures.

Our all-aluminum, modular product line is easy to install, reconfigure, relocate, and accommodates virtually any layout or configuration.



Visit [www.ezaccess.com](http://www.ezaccess.com) for additional information

1-800-451-1903



# Designed to fit your application



## FEATURES


- Designed for compliance with ADA, IBC, OSHA, and most local code guidelines
- The field-proven design can be configured to fit most applications, allowing the flexibility needed to accommodate virtually any site plan or lot configuration
- Two rail styles are available
  - Top rail with midrail creates a two-line system
  - Top rail with picketed inserts creates a system with guards
- All ramps feature smooth, continuous handrails and 4" curbs

## DESIGN & MATERIAL

- Architecturally designed for a clean appearance
- Made of aircraft quality, lightweight aluminum for years of maintenance-free use
  - Safe and durable with a long life cycle – aluminum will not rust, rot or corrode
  - Recyclable and naturally non-combustible
- Welded, extruded tread is utilized on our ramps, platforms, and steps, for reinforced strength and permanent slip-resistance



All PATHWAY HD walking surfaces feature Gecko Grip®, our patented, raised-rib tread featuring a 2-tier, 3-point gripping surface. The innovative design utilizes deep knurling, which provides enhanced cross-directional traction when entering and exiting the system.

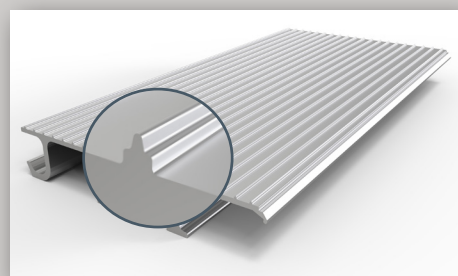

## INSTALLATION

- Universal components and pre-assembled sections make installation quick and easy without the need for expensive, heavy-duty equipment
- Combine ramps, platforms, and steps to create the ideal safe access solution
  - If your needs change, the PATHWAY HD can easily be reconfigured, moved, or expanded
- Ramps and platforms have independently adjustable legs to accommodate uneven ground conditions for simple, onsite leveling
- Standard configurations ship within 24-48 hours to help eliminate costly delays (custom configurations available)
- Site-specific stamped drawings available



# Quick Specs

## Ramps

- Standard lengths: 2', 3', 4', 5', and 6'
- Standard widths: 48" and 54" (clear width)
- Curbs: 4" high
- Rails:
  - Picketed*
    - Guard: 42" high; 1.5" diameter
    - Handrail: 36" high; 1.5" diameter
    - Lower (child) rail: 25" high; 1.5" diameter

### *Two-line*

- Top Rail: 42" high; 1.5" diameter
- Midrail: 21.5" high
- Handrail: 36" high; 1.5" diameter
- Lower (child) rail: 25" high; 1.5" diameter

## Platforms

- Standard sizes: 5'x5', 5'x6', 5'x7' and 6'x6' (clear width)
- Rails:

### *Picketed*

- Guard: 42" high; 1.5" diameter

### *Two-line*

- Top Rail: 42" high; 1.5" diameter
- Midrail: 21.5" high

## Steps

- Standard heights:  
18", 24", 30", 36", 42", 48", 54", and 60"
- Standard risers: 6" high, 12.5" deep
- Standard width: 56" (usable)
- Guard: 42" (picketed)
- Handrail: 36" high, 1.5" diameter
- Legs: Fully independent and adjustable

| Weight capacity: 100 pounds per square foot and a concentrated vertical load of 300 pounds. |

*Ramp, platform, and step combinations for a variety of applications*





## Options:



Special order ramp lengths and widths, platform sizes, and step riser heights are available to accommodate your exact specifications and needs.

If inspected and flagged after original installation, in-line welded picket sections can easily be added to a two-line PATHWAY HD ramp system for code compliance and additional safety. Field-converting to picketed guards is a simple process requiring minimal hardware.



For ramp projects that will be used primarily by children, a second handrail, commonly known as lower child rail, is available.



All PATHWAY HD products are covered under the EZ-ACCESS 3-year warranty and are made in the USA.

EZ-ACCESS, a division of Homecare Products, Inc., serves the entire United States with premier products that provide access solutions. In addition to the PATHWAY® HD Code Compliant Modular Access System, we also offer an entire line of residential access products. Contact us today or visit our website for more information.

[customerservice@ezaccess.com](mailto:customerservice@ezaccess.com) | 1.800.451.1903 | [www.ezaccess.com](http://www.ezaccess.com)